





Cyphertag® - RELV1 Reader Install Guide.

This guide is meant as a quick reference for installers. For full details on the install of the RELV1 reader, please refer to the product manual which can be found on the Identec website www.identec.com or supplied by Identec on request info@identec.com.

Back Plate Mounting

The reader back plate should be mounted on a flat surface and not directly on metal. Mounting the reader to the back plate requires locating the top location points on the back plate to the corresponding mounting points in the top of the reader and gently pushing the reader down on to the back plate. An M6 screw is supplied to fix the reader to the back plate. To remove the reader from the back plate insert a terminal screwdriver in to two of the water drains on either the bottom or side edges and gently lift to overcome the side and bottom clips.

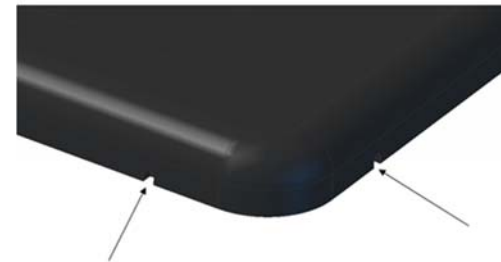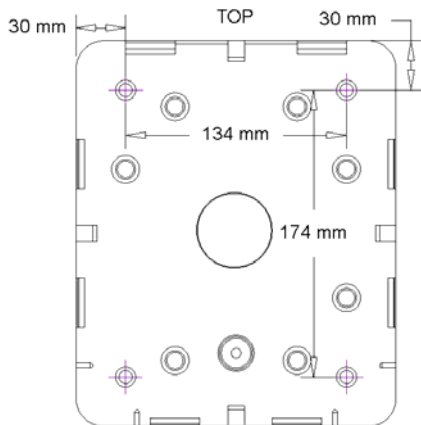

Connections

Pin 1	RS422/485-A	Pin 8	Relay – NO
Pin 2	RS422/485-B	Pin 9	Relay – Common
Pin 3	Range	Pin 10	Relay – NC
Pin 4	RS232 Rx	Pin 11	Wiegand Data 1
Pin 5	RS232 Tx	Pin 12	Wiegand Data 0
Pin 6	- V	Pin 13	Hold
Pin 7	+V (12-26VDC)	Pin 14	LED

86-1057 Issue 1 – April 2016